

HOW TO ACCESS MULTIPLE BOOKS ON A SINGLE CARTRIDGE

When you receive a cartridge with multiple books on it, you can access the books in one of two ways: The Easy Way and the Bookshelf Mode.

#1- The Easy Way

1. When you reach the very end of the book or the initial instructions, press the green rectangular Play button.
2. The machine will then prompt the patron to “Press the Play button again to go to the next book.” Go ahead and press the play button again, and the machine will start playing the next book.



#2- The Bookshelf Mode (Skipping over books, etc.)

1. Insert the cartridge in the player and turn on the power by pressing the red, circular Power Button.



2. Press and hold the green, rectangular Play button for about 3 seconds until the player beeps and says “Bookshelf” and announces the number of books on the cartridge..



3. Tap the Rewind or Fast Forward buttons, located on each side of the green rectangle Play button, to move to the next book. The book title will be announced. To advance to the next title, just press the Fast Forward button again or tap the Rewind again to go to the previous book.



4. Once you get to the title you want to read, press the green, rectangular Play button. The player will exit the Bookshelf Mode and start playing the selected title.